
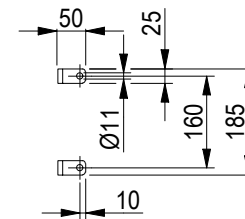
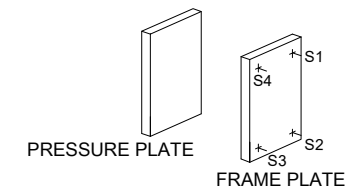
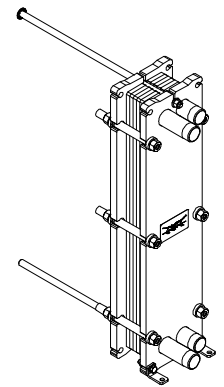
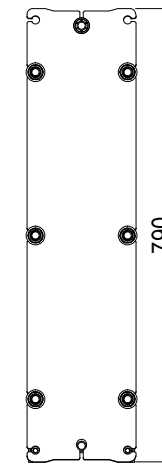
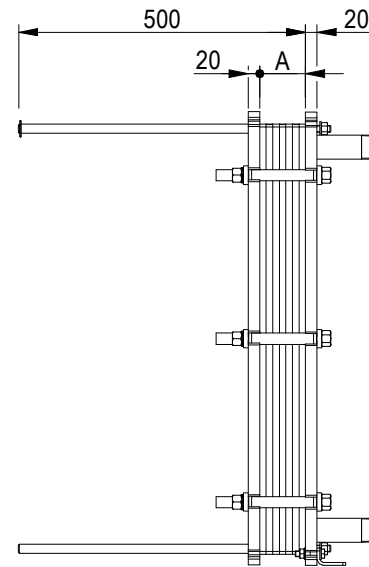


Space between pressure plate and supporting column should be kept free from fixed installations!





(MOVABLE)

Free space can be reduced to this distance on one of the sides

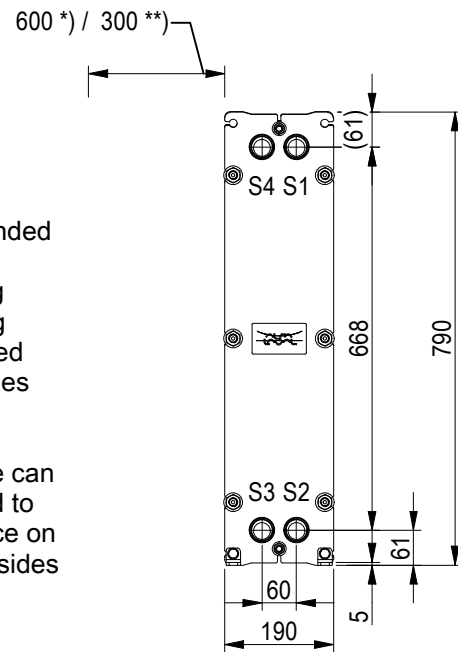

A-A:

C-C:

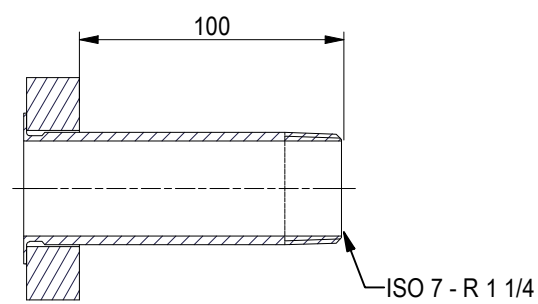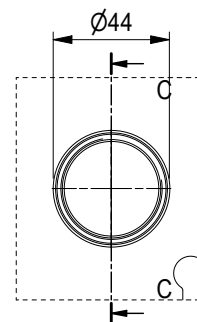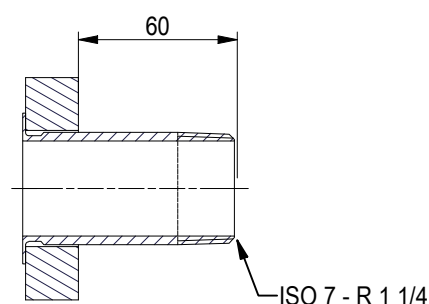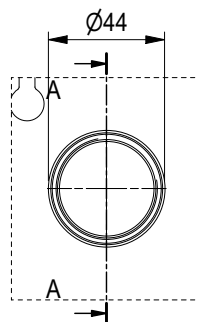

All dimensions in millimeters (mm)

NO. OF UNITS

1

TL3-BFG

Do not use this drawing for foundation bolting or piping layout

DATE 2/25/22
REVISION 0



www.alfalaval.com