
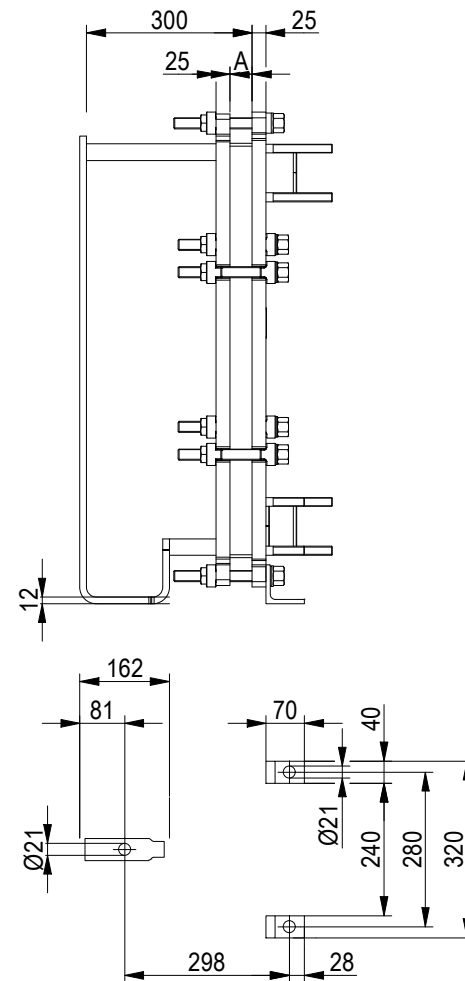







Space between pressure plate and supporting column should be kept free from fixed installations!

*) Recommended free space for opening and closing to be applied on both sides


Free space can be reduced to this distance on one of the sides

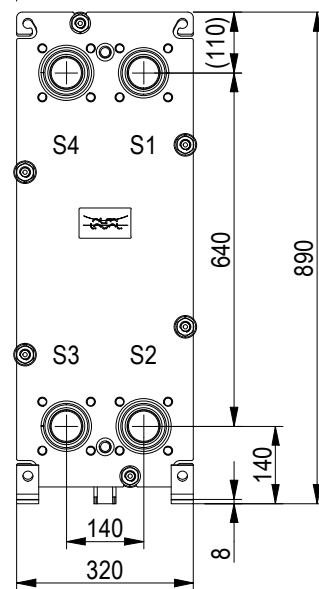

 
(MOVABLE)

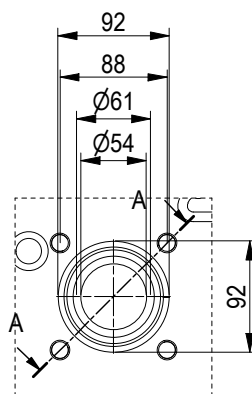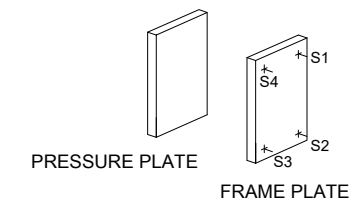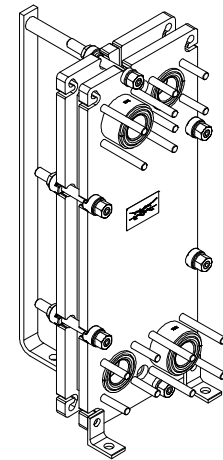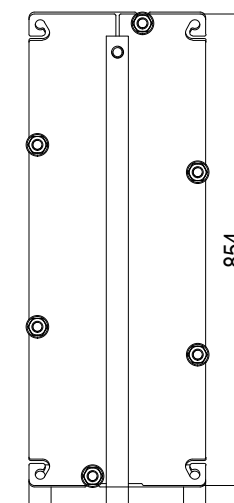


A-A:
NBRP / ALLOY 316

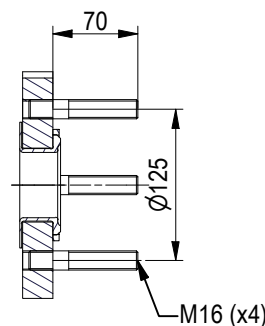

EN 1092-1 DN50 PN10
S2, S4

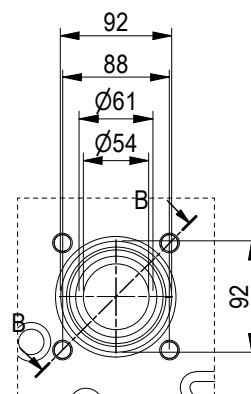

B-B:
NBRP / ALLOY 316

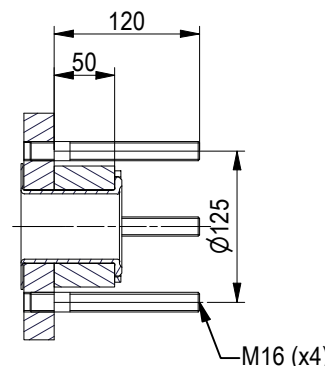

All dimensions in millimeters (mm)

NO. OF UNITS

1



 
www.alfalaval.com

DRAWING

GASKETED PLATE HEAT EXCHANGER

T6-PFM

PED Article 4.3



8240120998

Do not use this drawing for foundation bolting or piping layout

DATE 2/21/22
REVISION 0