

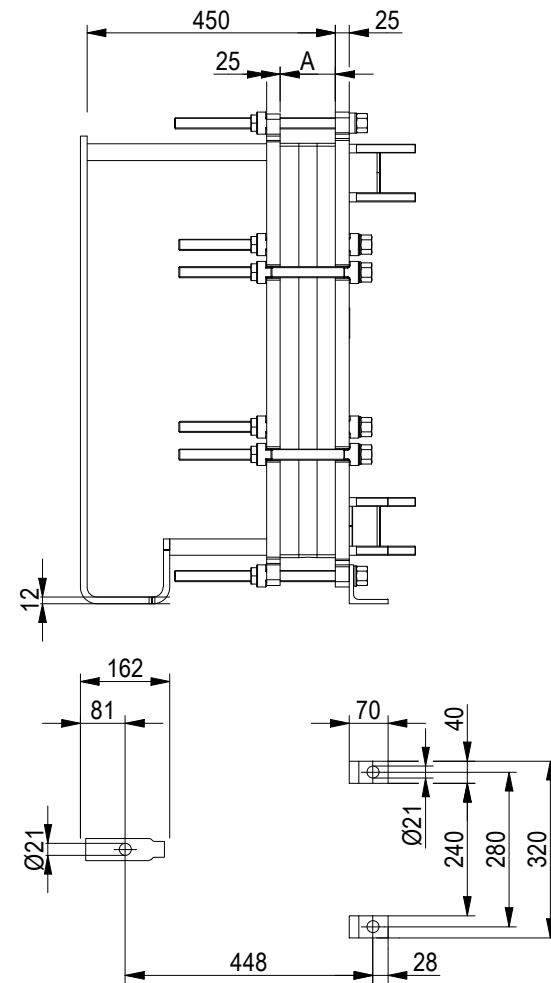
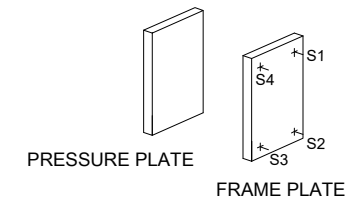


Space between pressure plate and supporting column should be kept free from fixed installations!

*) Recommended free space for opening and closing to be applied on both sides

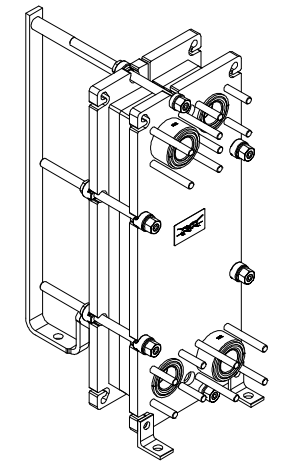

(MOVABLE)

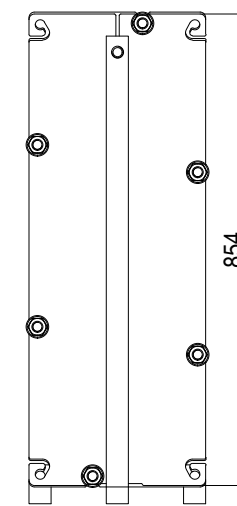

NO. OF UNITS

1

CHANNEL ARRANGEMENT 1*14 H
/ 1*15 H



T6-PFM

Do not use this drawing for foundation bolting or piping layout

DATE 2/21/22
REVISION 0