

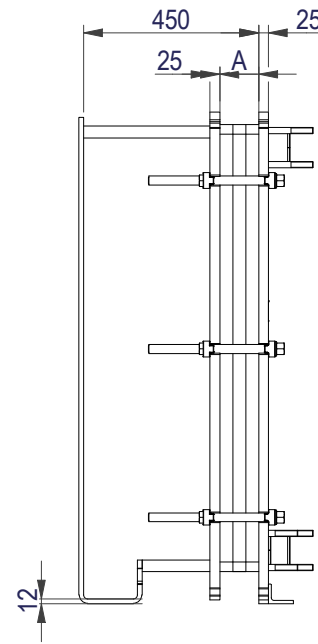
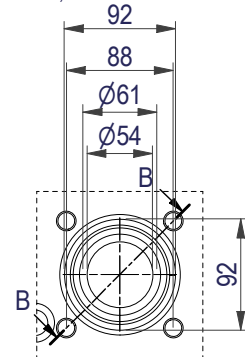
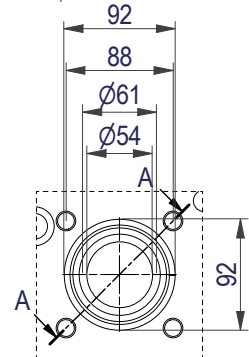
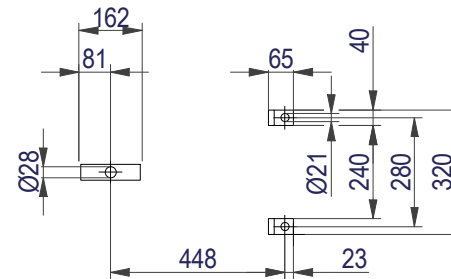
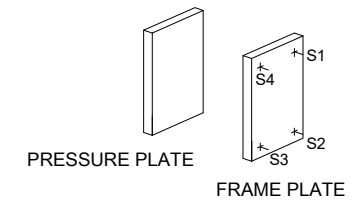


Space between pressure plate and supporting column should be kept free from fixed installations!

Free space can be reduced to this distance on one of the sides

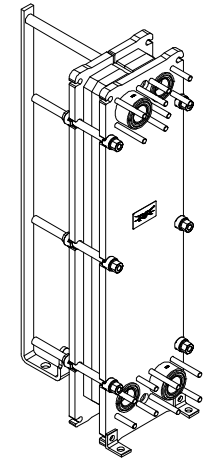

(MOVABLE)

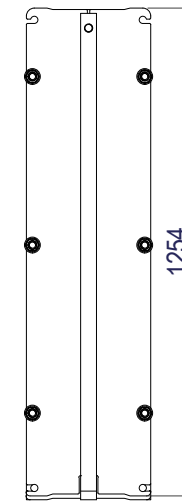

NO. OF UNITS

1

TL6-BFM

Do not use this drawing for foundation bolting or piping layout

DATE 2/24/22
REVISION 0



www.alfalaval.com