


Valve clusters

Double seat valves

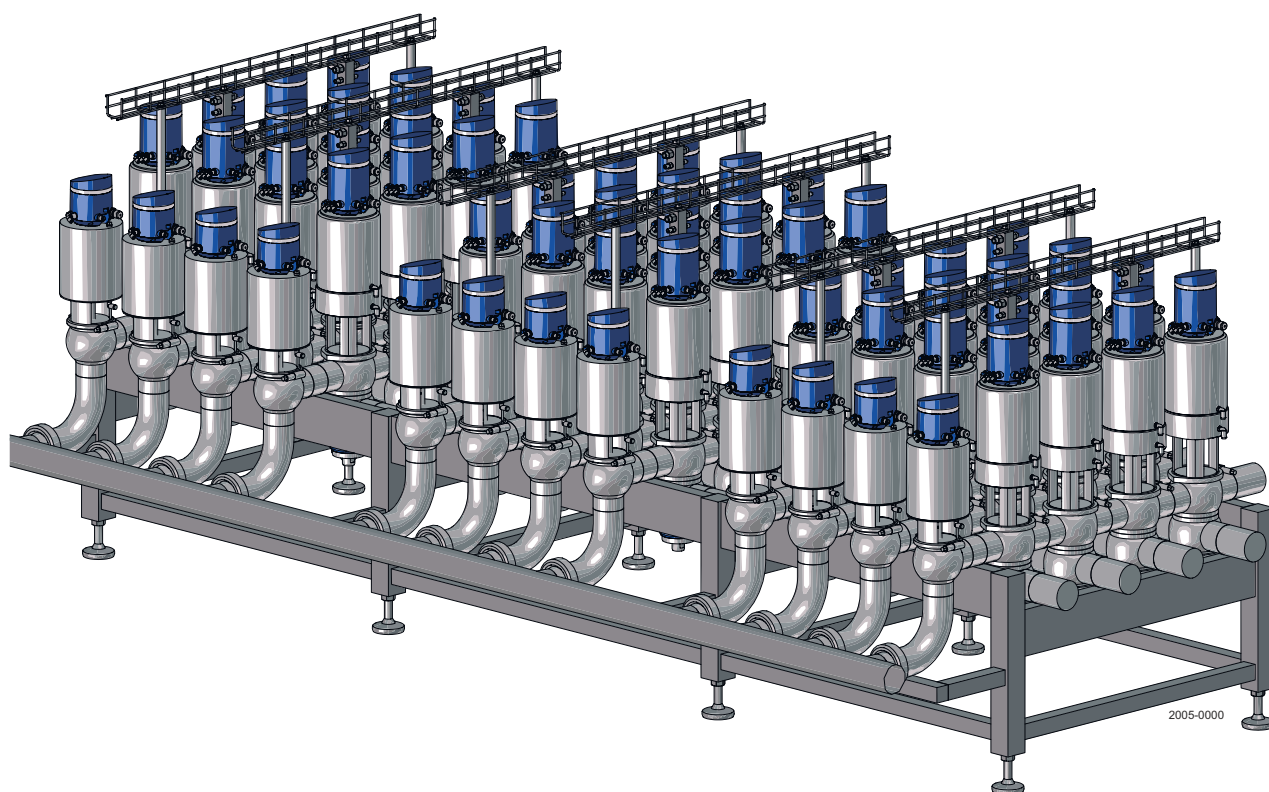

Lit. Code

200008035-1-EN-GB

Guidelines for installation
of valve clusters and
other types of
installations

Published by
Alfa Laval Kolding A/S
Albuen 31
DK-6000 Kolding, Denmark
+45 79 32 22 00

The original instructions are in English

© Alfa Laval AB 2025-09

This document and its contents are subject to copyrights and other intellectual property rights owned by Alfa Laval AB (publ) or any of its affiliates (jointly "Alfa Laval"). No part of this document may be copied, re-produced or transmitted in any form or by any means, or for any purpose, without Alfa Laval's prior express written permission. Information and services provided in this document are made as a benefit and service to the user, and no representations or warranties are made about the accuracy or suitability of this information and these services for any purpose. All rights are reserved.

Contents

- 1 Introduction.....5
 - 1.1 Important information.....5
 - 1.2 Check list.....5
- 2 Installation.....7
 - 2.1 General installation.....7

This page is intentionally left blank.

1 Introduction

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
1.1 Important information

Unsafe practices and other important information are emphasized in this manual.

This document is to be read as a guideline when making clusters and other types of installations.

If in doubt, please contact Alfa Laval for advice.

1.2 Check list

1)	Installation free from stress		
2)	No load on the valve bodies		
3)	Avoid misalignment		
4)	Compensate for thermal expansion		
5)	Choice of supports allowing thermal expansion		
6)	Allow for welding shrinkage		
7)	All legs of frames must touch the floor		
8)	Be aware of service access		
9)	Avoid block filled pipe A = water/product		


This page is intentionally left blank.

2 Installation

2.1 General installation

- 1 Avoid stress on the pipe system when installing the valve cluster. Secure free end from expansion.


Stress can come from load, misalignment or thermal expansion and can be induced both vertically and horizontally.

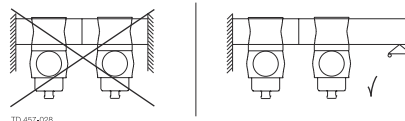

- 2 It is important that no load is applied directly to the valve bodies.

In installations with more levels the upper pipe must rest in an open support on the upper bridge allowing thermal expansion to move upwards.


The lower pipe must be supported as to avoid the load tension from the vertical pipe causing stress.

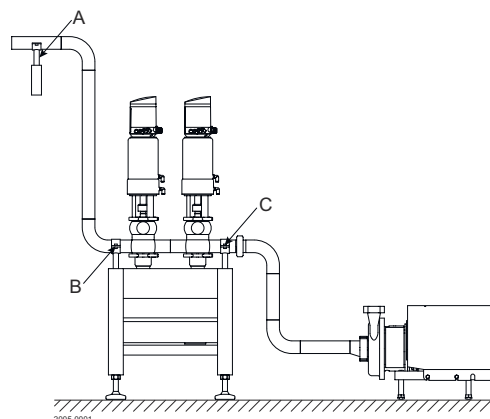

- A:** Open pipe support.
B: Pipe support fixed or loose.
C: Pipe support fixed or loose.

- 3 Apart from being properly supported, the area on which the valves rest must be straight and even to allow for thermal movement.

The load from the cluster may not cause deflection of the frame. Pipe supports must be placed in intervals avoiding deflection.



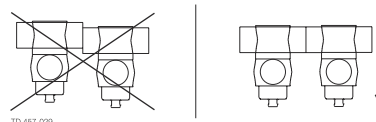



- 4 It is important to compensate for thermal expansion as this can lead to malfunction of valves.

Pipes should be kept as short as possible as long pipes present a potential risk of problems with thermal expansion.

The wide temperature range in the parallel lines in a cluster causes an uneven heat expansion from line to line. Therefore, the cluster should be designed as compact as possible.

Distance pipes should be avoided in the cluster lines as this increases the pipe length and with the combination of hot and cold pipes the heat expansions can cause tremendous forces on the individual valve body.

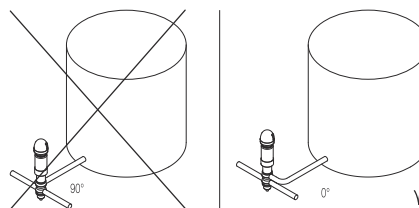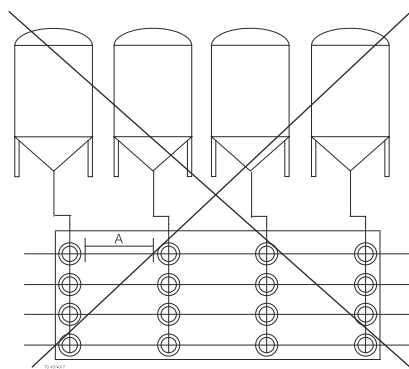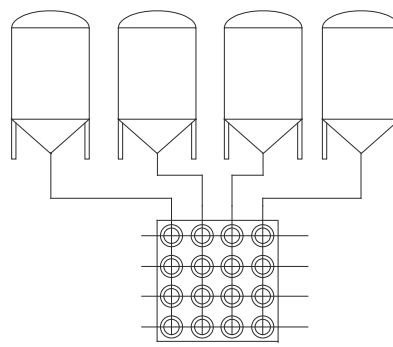

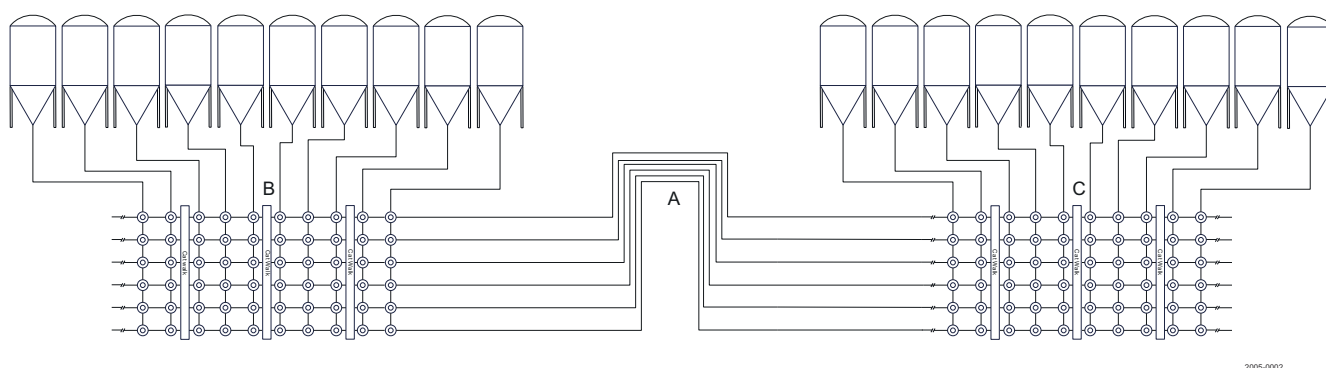


2005-0002

- A:** Compensation by U-bends
- B:** Fixed support
- C:** Fixed support

If long pipes cannot be avoided, compensation must be introduced. U-bends are the simplest and most cost-effective way to break the pipes into short lengths. These will absorb the thermal expansion.


If space does not allow this, compensators can be inserted as shown. For number and dimensions, please refer to supplier documentation.

The thermal expansion must be allowed unhindered movement, but from pre-decided points in the system. These points are called fixed points. A fix point holds the pipes in position regardless of temperature. The thermal expansion is allowed to move away from the fix point into a more flexible area (compensation).

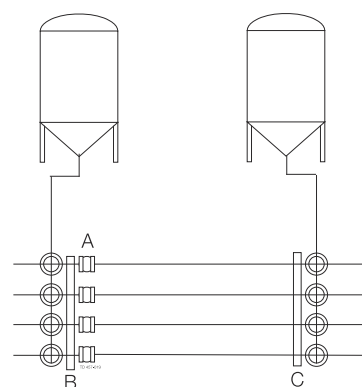

- A:** Compensation by rubber bellows compensator
- B:** Fixed point (rigid)
- C:** Fixed point (rigid)

Thermal expansion diagram (L)

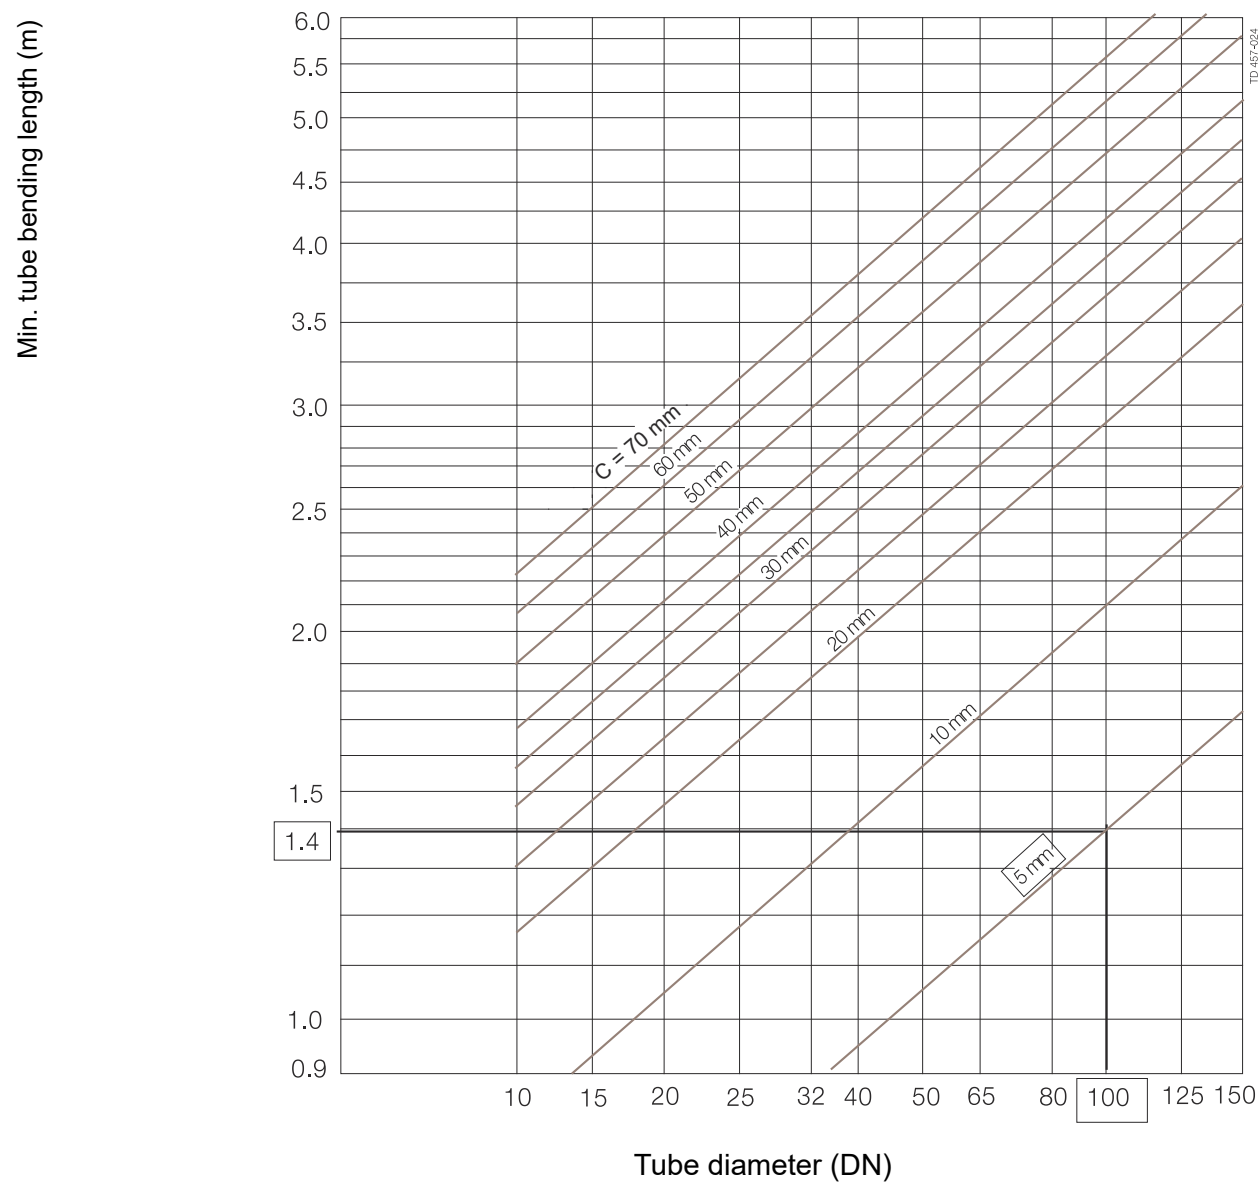

C = Expansion

Example: Tube DN100, expansion = 5.1 ~ 5 mm ⇒ L = 1.4 m

Thermal expansion in straight stainless steel tubes

Temperature rise, °C	5	10	15	20	25	30	35	40	45	50	55	60
Thermal expansion in mm per 10 m	0.9	1.7	2.6	3.4	4.3	5.1	6.0	6.8	7.7	8.5	9.4	10.2

Temperature rise, °C	65	70	75	80	85	90	95	100	105	110	115	120
Thermal expansion in mm per 10 m	11.1	11.9	12.8	13.6	14.5	15.3	16.2	17.0	17.9	18.7	19.6	20.4

Please be aware that some compensator types need specially designed fix points. Please refer to manuals for specific compensators.

Compensation achieved by bends.


These bends vary in shape depending on available space and demand.

“L” (or L1 or L2 respectively) should be min. 3 x D. “X” should be min. 6 x D, however it is recommended to make “L” (or L1 or L2 respectively) longer than “X”.

Main focus has to be on:

1. Length of thermal expansion to be compensated for (same direction as the arrows above). The thermal expansion can be found in the table “Thermal expansion in straight stainless steel tubes” or can be calculated using the following formula: **Thermal expansion = Increase in temp x 17×10^{-6} x length of actual pipe between fix points.**
2. L is the length necessary to obtain the generated thermal expansion without harming the pipe work and can be found in the curve next page.

The bends used for thermal compensation must be 90-degree bends

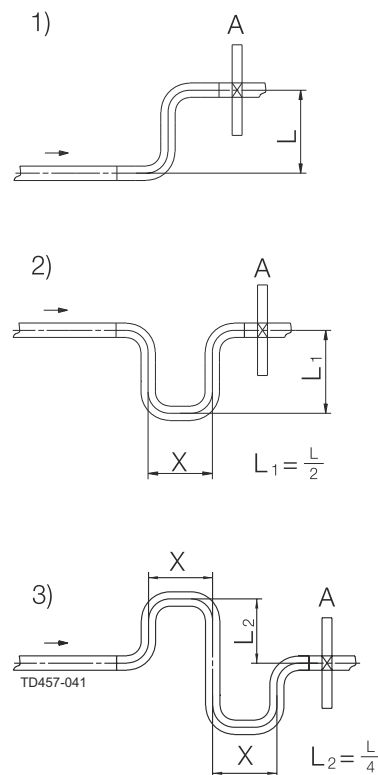


A: Fixed support


5 Supports for thermal expansion

Use mainly loose pipe supports and place those in the direction of the longest pipe only (thermal direction). If supports are needed in the other direction (in order to eliminate loads from surrounding equipment), make these as supports which can slide on the frame.


Ensure that the surrounding plant is prepared to absorb the thermal expansion from the cluster. In the example shown in Step 2 on page 7, one of the two supports shown on the valve cluster should be fixed and the other should be loose. If this valve cluster would have been longer but with the same surroundings it is recommended to make a row of fixed supports in the centre of the cluster and the other ones loose.

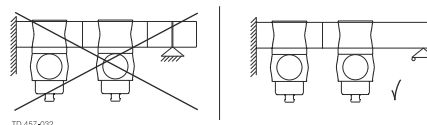


- 6 Be aware of welding shrinkage.

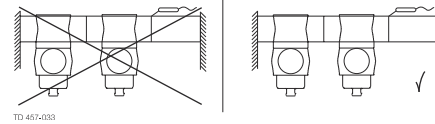

- 7 All legs must touch the floor at all times, and the lock nuts must be tightened. This is to avoid possible deformation of valve cluster due to deflection caused by the frame not being properly supported.



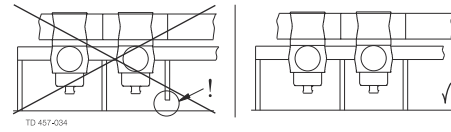


- 8 In large valve clusters service access after max. every 4th row is recommended. The service access ways should be max. 500 mm wide.

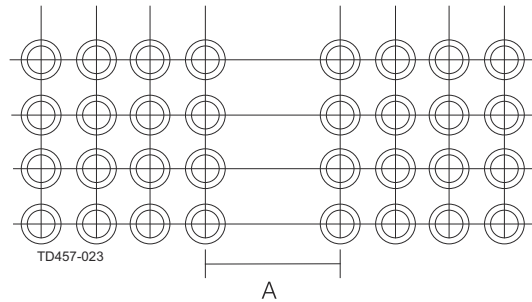



A: Service access

- 9 Minimum supporting frame point underneath the valve manifold, must be at least every 4 rows and every 4 lines.

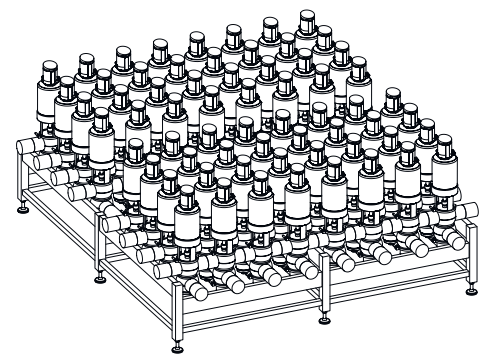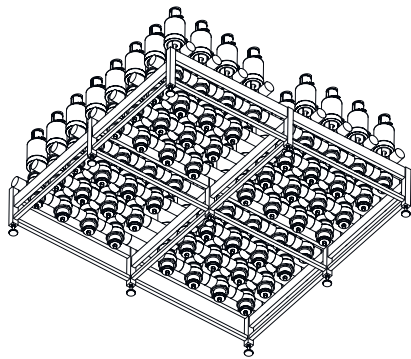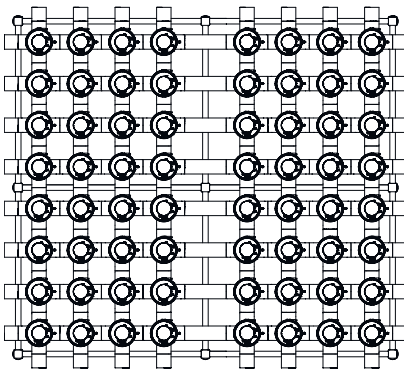

- 10** The frame must be strong enough to carry the liquid filled cluster and minimum one person standing on the cluster - without deflecting.



Maximum beam deflection: 1 mm over the length or width of the cluster.

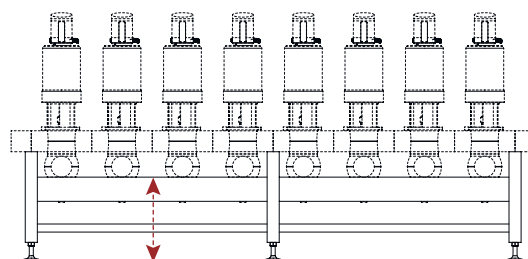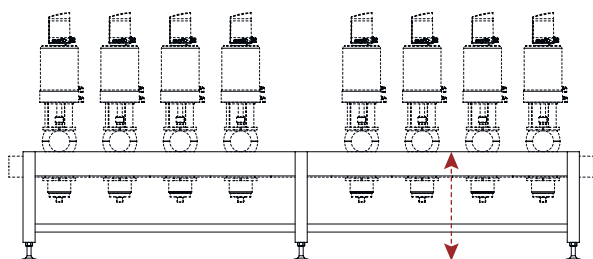


2005-0002

- 11** When constructing a pipe system keep in mind that liquid cannot be compressed.

Therefore, blocking the pipes should be avoided as constriction of liquid can cause malfunction of the valves. Likewise increasing hydraulic pressure as a result of rise in temperature combined with block filled pipe can cause problems when not allowed for in design.

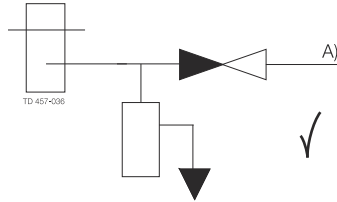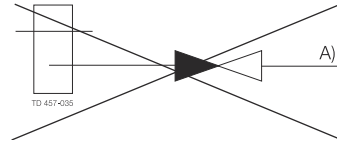


A = Water/Product

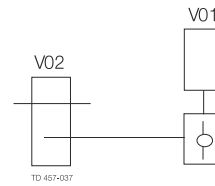

Open V01 before V02

Close V02 before V01

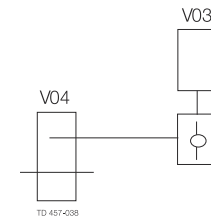

Open V03 before V04

Close V04 before V03

